


D808/ET MiniPurge[®] Manual

ML501_ET

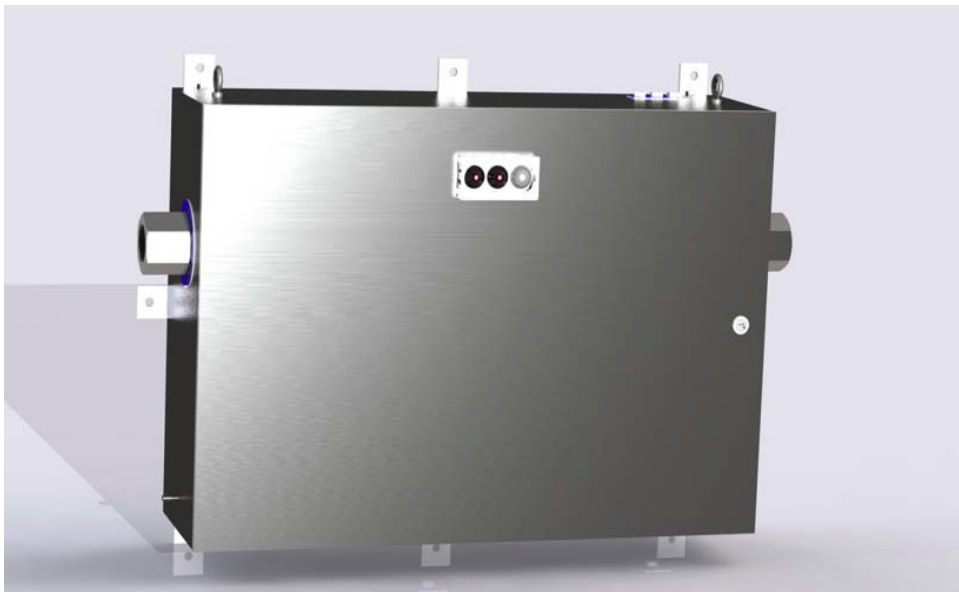

Important Note:

It is essential for safety that the installer and user of the Expo system follow these instructions.

Please refer to the standard for principles and definition.

These instructions apply only to the pressurizing system. It is the responsibility of the manufacturer of the pressurized enclosure to provide instructions for the enclosure.

Expo Technologies reserves the right to replace any component, with one of the equivalent functionality.

Section 1: System Specification	1
D808 MiniPurge® Control Unit Data	2
D808 Relief Valve Unit and Purge Outlet Valve with integral spark arrestor	3
Section 2: Quick User Guide	4
Installation	4
Operation of the System	4
Section 3: Application Suitability	5
Section 4: Description and Principle of Operation	6
Section 5: Main Components	7
Air Supply Filter	7
Logic Air Supply Regulator	7
Purge Flow Regulator	7
CLAPS Regulator	7
Low Pressure Sensor	7
Purge Flow Sensor	8
CLAPS Sensor	8
Electronic Purge Timer	8
Alarm Only Circuit (/AO)	8
Power Interlock Switch	8
Alarm / Pressurized Switch	8
System Purging Switch (Optional)	9
Intermediate Switch	9
Visual Indicators	9
Relief Valve Unit	9
/PA Terminal Box	9
Section 6: Installation of the System	10
Relief Valve Unit	10
Air Supply Quality	10
Pipe Work	11
Multiple Enclosures	11
Provision and Installation of Alarm Devices	11
Power Supplies and their Isolation	11
Power Interlock Switch	11
Section 7: Commissioning	13
Commissioning the System	13
Normal Operation	14
Section 8: Maintenance of the System	15
General maintenance	15
Additional maintenance checks	15
Maintenance of Electronic Timer	15
Re-calibration of the Relief Valve Unit	15
Re-calibration of the Pressure Sensors	16
Section 9: Fault Finding	17
General Information	17
System purges correctly but trips and auto re-purges at the end of the purge time.	17
Relief Valve opens (continuously or intermittently)	18
System enters purging but purge indication does not occur	18
System begins purging but cycles fail to complete	18
Section 10: Recommended Spares List	19
Section 11: Glossary	19
Section 12: Drawings and Diagrams	19
Section 13: Certificates	20

Section 1: System Specification

7 X LC / ss / ET / OV / PA / PC

Size

7 = MiniPurge®

Approval / Certification

ATEX Certificate:

Sira 01ATEX1295X

CE 2813 II 2(2) GD

Ex [pxb] ia IIC T5 Gb

Ex [pxb] ia IIIC T100°C Db

T_{amb} -20°C to +55°C

IECEX Certificate:

IECEX SIR07.0027X

Ex [pxb] ia IIC T5 Gb

Ex [pxb] ia IIIC T100°C Db

T_{amb} -20°C to +55°C

INMETRO Certificate:

TÜV 12.1462X

Ex [pxb] ia IIC T5 Gb

Ex [pxb] ia IIIC T100°C Db

T_{amb} -20°C to +55°C

PC = Pressurized Control. Automatic leakage compensation (CLAPS)

PA = Power and Alarm Switches. Integral /PA Terminal Box

OV = Purge Outlet Valve is pneumatically operated

Timing Method

ET = Electronic Timer

MiniPurge® Housing

ss = Stainless Steel 316L

Pressurization Method

LC = Leakage Compensation

For limitations and conditions of use refer to the applicable certificates.

D808 MiniPurge® Control Unit Data

Action on Pressure Failure:	Alarm and Trip (isolate power to pressurized enclosure), user adjustable Alarm Only.
Type of Operation:	Automatic leakage compensation using the Closed Loop Automatic Pressurization System (CLAPS System).
Purge Flow Capacity	Up to 20000 NI/min @ 4.2 barg inlet pressure
Enclosure Material:	Stainless Steel 316L.
Mounting Method:	Wall mounting lugs & spacers. Fixing holes as per drawing:
Temperature Limits:	-20°C to +55°C.
Compressed Air Supply:	Clean, dry, oil free air or inert gas. Refer to <i>Air Supply Quality</i> section in <i>Installation of the System</i> .
Supply Pressure:	4.2 to 8 barg (61 to 116 psi).
Logic Regulator and Gauge:	Fitted and set to 2.5 barg (36 psi).
CLAPS Regulator & Gauge:	Set to system requirements.
Process Connections:	Purge supply and outlet to motor - 2" NPT female. Minimum supply line 50 mm (2") I.D Pipe. Reference points & signals 1/8" NPT female.
Visual Indicators:	Alarm (Red ●) / Pressurized (Green ●). System Purging: 4 LEDs that flash sequentially to indicate elapsed time (Black ● when not purging).
Power Interlock Switch:	DPNO switch, contact ratings 250 Vac 4 Amps (AC-15) / 24V DC 4A, Ex d IIC T6 Gb / Ex tb IIIC T80°C Db.
Alarm Switch:	SPCO switch, contact ratings 250 Vac 4 Amps (AC-15) / 24V DC 4A, Ex d IIC T6 Gb / Ex tb IIIC T80°C Db.
Intermediate Switch:	SPCO switch, contact ratings 250 Vac 4 Amps (AC-15) / 24V DC 4A, Ex d IIC T6 Gb / Ex tb IIIC T80°C Db.
System Purging Switch (Optional):	SPCO switch, contact ratings 250 Vac 4 Amps (AC-15) / 24V DC 4A, Ex d IIC T6 Gb / Ex tb IIIC T80°C Db.
High Pressure Switch (Optional):	SPCO switch, contact ratings 250 Vac 4 Amps (AC-15) / 24V DC 4A, Ex d IIC T6 Gb / Ex tb IIIC T80°C Db.
Minimum Pressure Sensor:	Minimum: 1.5 mbarg. Maximum: 5.0 mbarg. Default Setting: 1.5 mbarg. Tolerance -0, +0.7 mbarg.
Intermediate Sensor:	Minimum: 3.0 mbarg. Maximum: 7.0 mbarg. Default Setting: 4.0 mbarg. Tolerance: -0, +10%.
High Pressure Sensor:	Minimum: 20.0 mbarg. Maximum: 35.0 mbarg. Default Settings: 32.0 mbarg. Tolerance -0, +10%.
Note: There must be a 1.5 mbarg difference between the minimum pressure and intermediate sensors.	
Purge Flow Sensor:	Set at 6.4 mbarg (Tolerance: -0, +10%).

CLAPS Sensor: Minimum: 10.0 mbarg.
 Maximum: 15.0 mbarg.
 Default Setting: 10.0 mbarg.
 Tolerance: -0, +10%.

**Note: there must be a 2.5 mbarg difference between the intermediate and CLAPS sensor calibration point.
 For example: Minimum pressure = 5 mbarg, intermediate pressure = 6.5 mbarg, CLAPS sensor = 9 mbarg.**

Purge Time: User selectable, in 1 minute intervals, up to 99 minutes (tolerance - 0, +3 seconds).
 Default Setting 99 minutes.

Weight: 70 kg (154.3 lbs).

D808 Relief Valve Unit and Purge Outlet Valve with integral spark arrestor

Type: RLV200/ss/FS, Design number: D808RLV.
 Bore: Purge Outlet Valve Ø 188 mm, Relief Valve Ø 150 mm.
 Relief Valve Lift-Off Pressure: Minimum: 20.0 mbarg (+0, -20%).
 Maximum: 35.0 mbarg.
 Default: 30 mbarg.
 Flow Rate: Factory set to: 6000 to 14000 NI/min.
 Material: Housing: Stainless steel 316L.
 Gasket: Neoprene.
 Spark arrestor: Stainless steel mesh.
 Mounting Method: Rectangular cut-out and fixing holes as per drawing.
 Weight: 23 kg (50.7 lbs)
 Orifice: Special orifice plate may be required.

Note: Special settings are available on request, see Test and Inspection Sheet.

Section 2: Quick User Guide

Installation

The MiniPurge[®] system must be installed by a competent engineer, in accordance with relevant standards, such as IEC / EN 60079-14 and any local codes or practice.

- Mount the purge system in accordance with the hook-up drawing.
- Ensure the system is installed according to the full instructions in the “*Installation of the System*” section of this manual.
- All pipings must be clean and free of dirt, condensation and debris prior to connection to the purge system or pressurized enclosure.
- It is strongly recommended that a local isolation valve is installed on the air supply upstream of the purge system.

Note: Most faults are due to restricted air supply, inadequate supply pipe work or drop in air supply pressure during the purge process.

Operation of the System

Once the system is installed correctly, turn on the air supply. Refer to *Commissioning* section.

Indicator	Colour	Status
Alarm / Pressurized	Red ●	Low pressure alarm (enclosure pressure too low)
Purging	Black ●	Purge flow too low or not in purge mode

The purge system commences the purge cycle:

- The purge air will enter the enclosure.
- The pressurized enclosure will obtain a positive pressure.
- The Purge Outlet Valve will open within the Relief Valve Unit.
- The air will then exit the Relief Valve Unit housing via the spark arrestor.



Indicator	Colour	Status
Alarm / Pressurized	Green ●	Pressurized (minimum enclosure pressure achieved)
Purging	Black ●	Purge flow too low

Open the Purge Flow Restrictor Valve until the air flow reaches the required rate; the system will initiate the timed purge cycle. Start a stopwatch when the purging indicator flashes yellow

Indicator	Colour	Status
Alarm / Pressurized	Green ●	Pressurized
Purging	Sequential flashing Yellow ●	Purge flow rate above minimum

On completion of an uninterrupted purge cycle of the required length, the system will indicate purge complete.

Stop the stopwatch when the purging indicator stops flashing.

Indicator	Colour	Status
Alarm / Pressurized	Green 	Pressurized and in leakage compensation mode
Purging	Black 	No longer in purge mode

Check stopwatch timing to verify that the actual purge time is equal to or greater than the required purge time.

Note: The recorded purge time must never be less than the required purge time.

The system is now operating correctly in leakage compensation mode.

If the system has not performed as expected, check the installation thoroughly and ensure it has been carried out according to the instructions.

If an obvious problem has not been highlighted and corrected, follow the procedures in the *Fault Finding* section.

If all checks have been carried out and the system still does not perform as expected, contact your local distributor or Expo Technologies.

Section 3: Application Suitability

MiniPurge[®] systems are certified for use in hazardous locations, where the hazardous location is non-mining (above ground) and the hazard is caused by flammable gasses, vapours or dust. Depending on the model the systems may be used in IECEx and ATEX Zone 1(21) and/or Zone 2(22) - Categories 2 and 3 respectively.

MiniPurge[®] systems may be used for hazards of any gas group. Apparatus associated with the MiniPurge[®] system, such as intrinsically safe signalling circuits and flameproof enclosures containing switching devices may be limited in their gas group. The certification documentation supplied with any such devices must be checked to ensure their suitability.

This system is primarily designed for use with compressed air. Where other inert compressed gasses are used (Nitrogen, for example) the user must take suitable precautions so that the build up of the inert gas does not present a hazard to health. Consult the Control of Substances Hazardous to Health (COSHH) data sheet for the gas used. Where a risk of asphyxiation exists, a warning label must be fitted to the pressurized enclosure.

The following materials are used in the construction of MiniPurge[®] systems. If substances that will adversely affect any of these materials are present in the surrounding environment, please consult Expo Technologies for further guidance.

Materials of Construction		
Stainless Steel	Aluminium	Acrylic
Mild (Carbon) Steel	Nylon	Silicone
Brass	Polyurethane	Neoprene
ABS	Polycarbonate	Polyester (glass filled)

Section 4: Description and Principle of Operation

The MiniPurge[®] system is pneumatic in operation, with electrical interfaces.

Purge and pressurization is a method of protection used in Zone 1 (21) and/or Zone 2 (22) hazardous locations to ensure that the interior of an enclosure is free of flammable gas. Addition of a MiniPurge[®] system allows the electrical equipment within the enclosure to be used safely in a hazardous location.

The principle of purge and pressurization is as follows:

- Clean compressed air or inert gas is drawn from a non-hazardous location.
- The interior of the pressurized enclosure is flushed to remove any hazardous gas or dust.
- This is introduced into the pressurized enclosure to keep the internal pressure at least 0.5 mbarg above the external pressure.
- Whilst pressurized, flammable gas cannot enter the enclosure from the environment.


Prior to switching on the power to the electrical equipment, the enclosure must be purged to remove any flammable gas that might have entered the enclosure before pressurization. Purging is the process of removal contaminated air and replacement with air (or inert gas) known to be free from flammable gas. The duration of this purge process is normally ascertained by performing a purge test.

At the end of the purge cycle the system automatically switches to leakage compensation mode. The Purge Outlet Valve is closed and the airflow is reduced but remains high enough to compensate for the leakage of air from the enclosure whilst maintaining the minimum over pressure state.

In the event of pressure failure within the pressurized enclosure the system will raise an alarm in the form of visual indicators and a volt free contact depending on the specification of the system. The default action on loss of pressurization is alarm and automatic disconnect of power (A&T - Alarm and Trip). This can be changed by the customer to Alarm Only (IAO), please refer to section titled *Main Components*.

The MiniPurge[®] system incorporates a Closed Loop Automatic Pressurization System (CLAPS). This allows the system to detect a rise or fall of the enclosure's internal pressure and adjust the leakage compensation rate accordingly. Pressure variations are more likely during sudden start up of large rotating electrical machines but can also be caused by changes in running temperature. This system has been specifically designed to maintain a stable internal pressure within the enclosure.

Pressure characteristics during purge and pressurization of a pressurised enclosure using a MiniPurge[®] system that incorporates a CLAPS system:

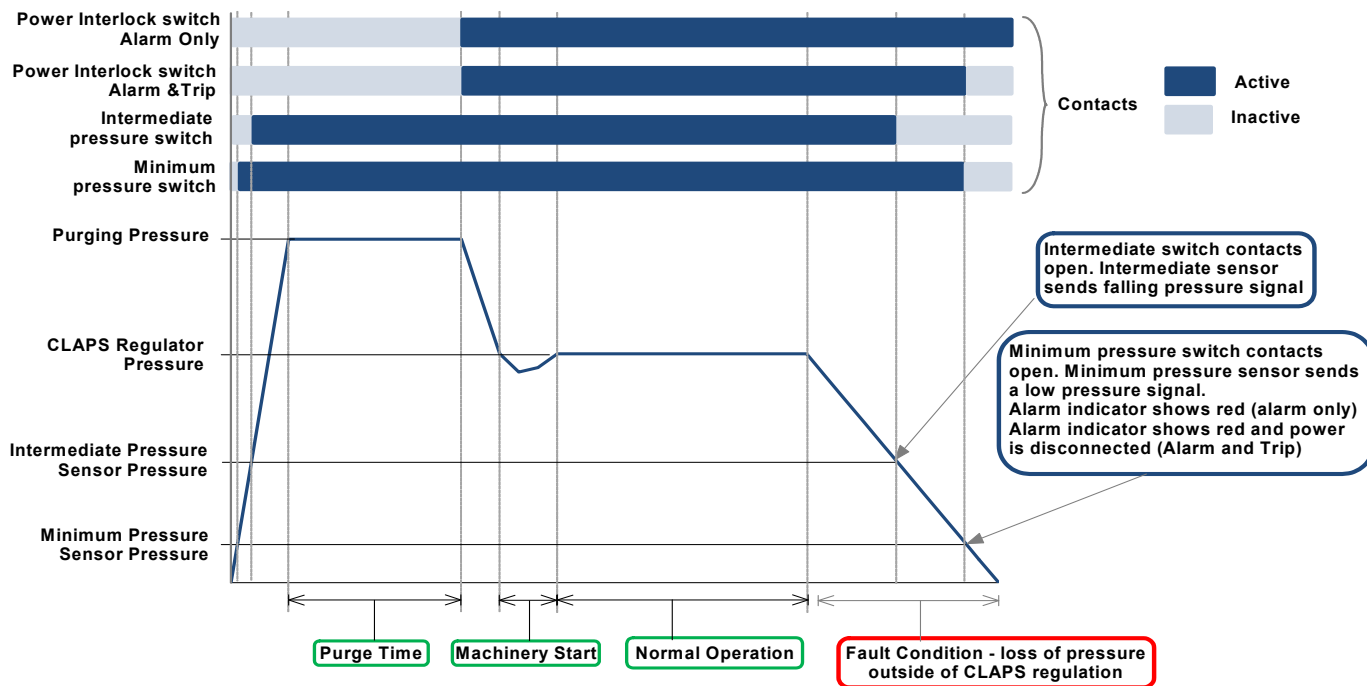

Section 5: Main Components

Air Supply Filter

The unit is provided with a 50-micron liquid / dust filter element as a precaution. The user of the MiniPurge[®] system must ensure that air supply is to the quality stated in 'Air Supply Quality' paragraph found in the Installation section.

Logic Air Supply Regulator

This device provides the system with a stable logic pressure supply for consistent operation. The pressure level is factory set to 2.5 barg (36 psig) and can be verified by means of the integral pressure gauge. It should only be adjusted if the gauge indicates that the regulated pressure is incorrect.

Purge Flow Regulator

This regulator controls the volume of purge air flowing through the system. It can be adjusted as required to give the desired purge air flow during commissioning.

CLAPS Regulator

This is the regulator that controls the leakage compensation air flow into the enclosure after the purging is complete. It either increases or decreases the air flow into the enclosure as appropriate to maintain a stable running pressure. The CLAPS Regulator must be set at the time of commissioning.

Low Pressure Sensor

The pressure inside the Pressurized Enclosure is monitored continuously by these devices. When the pressure is correct i.e. above the minimum pressure specified for safe operation, it provides a "Pressurized" output signal that can be seen by the operator e.g. displayed on a local Red/"Green" visual indicator. The sensor is factory calibrated to operate on a falling pressure at or above the minimum specified pressure.

Purge Flow Sensor

The Purge Flow Sensor monitors flow through the Purge Outlet Valve. At correct purge flow rates, above the minimum specified for purging, the sensor sends a signal that activates the purge timer. This sensor is factory calibrated to operate on falling flow rate at or above the minimum specified purge flow rate.

CLAPS Sensor


This sensor monitors the pressure within the pressurized enclosure and sends a control signal to the CLAPS Regulator. The normal running pressure must be determined prior to system start-up so that the CLAPS Sensor may be set to the level required to control the CLAPS Regulator.

Electronic Purge Timer

When both the enclosure pressure and the purge flow rate are correct, the Purge Flow Sensor activates the timer and the electronic timer starts. The timing period is selected using switches mounted on the timer module.

Note: Setting the timer to 00 minutes will cause infinite purging; the cycle will never complete.

During timing, the percentage of the purge cycle is indicated by four LEDs which flashes sequentially while the timer is running.

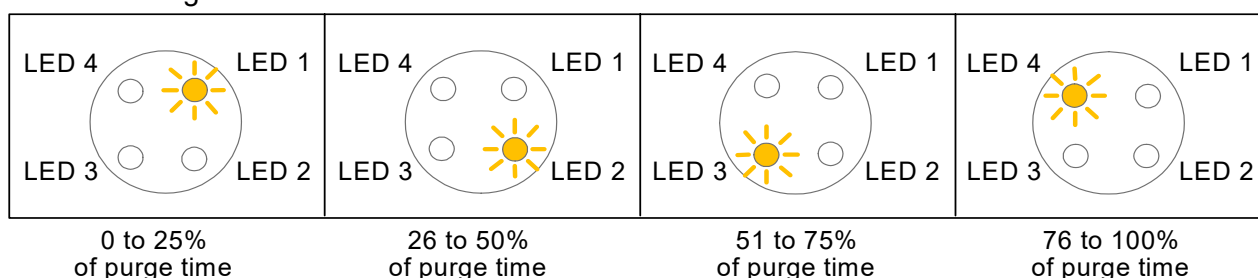

The Electronic Timer contains an intrinsically safe battery pack that needs regular replacement. See *Commissioning* section

Alarm Only Circuit (/AO)

If the pressure in the pressurized enclosure is too low the system will normally cut off electrical power to it. In certain circumstances, where local codes of practice allow, the system can be altered to provide a hold-on circuit that will maintain the electrical power supply to the pressurized enclosure while also providing a pressure failure alarm. The user must respond to the alarm and either restore the pressure to the pressurized enclosure or otherwise make the installation safe; for example, cut off the electrical supply. The decision to use the Alarm Only facility, and the allowable length of time for non-pressurized operation, is the responsibility of the user.

Warning: It is potentially dangerous to energise the pressurized enclosure in a non-pressurized condition when it is known that there is potentially explosive gas or dust in the hazardous location.

Power Interlock Switch

This flameproof power switch is activated by the signal from the Purge Complete Valve. This activation can be used to turn on the electrical supply to the pressurized enclosure. The cable from the switch is terminated in the /PA terminal box.

Alarm / Pressurized Switch

This flameproof switch is operated by the pressurized signal. It allows a remote electrical system status indicator to show either pressurized or a pressure failure alarm. The cable from the switch is terminated in the /PA terminal box.

System Purging Switch (Optional)

This switch is operated by the purge flow signal that allows a remote electrical system status indicator to signal that the system is purging; sometimes referred to as purge in progress. The cable from the switch is terminated in the /PA terminal box.



Intermediate Switch

This is a flameproof switch which is activated by the signal from the Intermediate Sensor. The cable from the switch is terminated in the /PA terminal box.



Visual Indicators



Visual indicators are fitted to provide status information to the operator.

Alarm / Pressurized Indicator

Green* 	Pressurized
Red 	Pressure Alarm (enclosure pressure low)

System Purging Indicator

Black* 	Purge flow too low (not in purge mode)
Yellow (flashing) 	Purging (flow above minimum)

* The Green  / Black  combination indicates normal operation of the pressurized enclosure after the initial purging cycle has been completed.

Relief Valve Unit

The Relief Valve Unit allows the purge air to exit the enclosure safely via a built-in spark arrestor. This spark arrestor is designed to prevent the emission of arcs, sparks and incandescent particles produced within the pressurized enclosure.

Purge air passes through the Relief Valve Unit; the preset pressure differential across the appropriate orifice ensures that the purge flow sensor is activated once the selected purge flow has been attained.

During the purge cycle a pneumatic cylinder operates the Purge Outlet Valve that lets the air from inside the enclosure exhaust through the Relief Valve Unit. When the system changes to leakage compensation mode, the Purge Outlet Valve is closed and the enclosure sealed.

The Relief Valve Unit has an in-built relief valve. This is sized to ensure that, if the air supply pressure rises up from the specified maximum, the internal enclosure pressure will not exceed the specified maximum working pressure of the pressurized enclosure.

/PA Terminal Box

The Terminal Box is increased safety (Ex e) certified and incorporates the terminal connection points for the alarm and interlock switches. All contacts provided are volt free (dry).

Cable entry methods (for example conduit or cable glands) must be certified to IECEx, ATEX or INMETRO standards. The main requirement is that IP66 (or better) ingress protection must be provided by use of seals or washers.

Section 6: Installation of the System

The MiniPurge[®] is designed for use under normal industrial conditions of ambient temperature, humidity and vibration. Please consult Expo before installing this equipment in conditions that may cause stresses beyond normal industrial conditions. The MiniPurge[®] system must be installed by a competent person in accordance with relevant standards, such as IEC / EN 60079-14, and any local codes of practice.

The MiniPurge[®] control unit should be installed either directly on, or close to the pressurized enclosure. It should be installed such that the system indicators and certification labels are in view.

All parts of the system carry a common serial number. If installing more than one system, ensure that this commonality is maintained within each system installed.

Relief Valve Unit

To achieve effective purging, the points where air enters and exits the pressurized enclosure should normally be at opposite ends of the enclosure. The RLV unit must be mounted vertically and there should be a minimum clearance of 300 mm (12") around the spark arrestor (purge outlet).

It is important that the interior and exterior of the spark arrestor is kept clean and debris is not allowed to accumulate; this might affect the calibration of the device. In particular the exterior of the spark arrestor should not be painted or blocked in any way.

Air Supply Quality

The MiniPurge[®] system should be connected to a protective gas supply, which is suitable for purging and pressurization.

The supply pipe connection to the MiniPurge[®] must be appropriate for the maximum input flow rate for the application.

The air supply must be regulated at a pressure less than the maximum stated inlet pressure.

The air supply must be: clean, non-flammable and from a non-hazardous location. The air should be of Instrument Air Quality. Although the purge control system will operate with lower air quality, its operational life will be adversely affected. The equipment that is being protected by the MiniPurge[®] may also suffer because of poor air quality.

With reference to BS ISO 8573-1: 2010, Instrument Air is typically specified as:

Particle Class 1

In each cubic metre of compressed air, the particulate count should not exceed 20,000 particles in the 0.1 to 0.5 micron size range, 400 particles in the 0.5 to 1 micron size range and 10 particles in the 1 to 5 micron size range.

Humidity or pressure dew point

The dew point, at line pressure, shall be at least 10 °C below the minimum local recorded ambient temperature at the plant site. In no case, should the dew point at line pressure exceed +3 °C.

Oil Class 2

In each cubic metre of compressed air, not more than 0.1mg of oil is allowed. This is a total level for liquid oil, oil aerosol and oil vapour.

When an inert gas is being used to supply the purge system, risk of asphyxiation exists. Refer to Application Suitability section.

Before connection of the air supply to the purge system, the supply pipe work should be flushed through with instrument quality air to remove any debris that may remain in the pipes. This must be carried out for at least 10 seconds for every meter of supply pipe.

Unless a supply shut-off valve has been fitted to the MiniPurge[®] system, an external shut-off valve with the same, or larger, thread size as the Control Unit inlet fitting should be fitted by the installer to prevent any restriction of purge flow.

The purge air from the MiniPurge[®] Control Unit should be piped within the pressurized enclosure to ensure purging of potential dead air spots.

The purge system is fitted with an internal regulator factory set to 3 bar feeding the logic.

Pipe Work

If the MiniPurge[®] is not connected directly to the pressurized enclosure, pipe work and fittings used to connect the Control Unit to the pressurized enclosure should be either metallic or appropriate to the environment into which the system is installed. No valve may be fitted in any signal pipe connecting the Control Unit to the pressurized enclosure. This pipe work must be fitted in accordance with local codes of practice where relevant.

Multiple Enclosures

This system is suitable for the purge and pressurization of the primary pressurized enclosure and its associated terminal boxes.

Provision and Installation of Alarm Devices

When the pressure inside the pressurized enclosure is above the minimum, the Minimum Pressure Sensor returns a positive (**pressurized**) signal causing the alarm indicator on the control unit to change from **red** to **green**.

When the pressure falls below the minimum permissible the positive (**pressurized**) signal is removed. This absence of signal indicates a **low pressure alarm** condition and causes the alarm indicator on the control unit to go from **green** to **red**.

There are volt free (dry) contacts available within the terminal box for remote usage.

The user must make use of this alarm facility in accordance with the local code of practice for Action on Pressure or Flow Failure. Most codes include the following recommendations:

- **Zone 1 Installations:** Alarm and Automatic Trip of Power.
- **Zone 2 Installations:** Alarm Only on pressure or flow failure with power being removed manually.

Power Supplies and their Isolation

All power entering the pressurized enclosure should have a means of isolation. This requirement also applies to any external power sources that are connected to the equipment such as volt-free (dry) contacts within the pressurized enclosure. This is commonly achieved using the Power Interlock Switch.

Power Interlock Switch

This switch is a Double Pole Normally Open, double-break switch: it provides two independent contacts that should be connected in series and used to isolate the power. This can be achieved using switchgear or other suitable switching device. These contacts are terminated and accessible to the user in the Ex e terminal box.

It is the responsibility of the user to ensure that the switch is only operated within appropriate technical limits.

The switch must be replaced after any short circuit that occurs within the main circuit; the switch is a piece of encapsulated equipment and as such it is not possible to check the state of the contacts. Technical modifications to the switch are not permitted.

Prior to commissioning, check that the Ex e terminal box is clean, the connections have been made properly, the cables laid correctly and all screws in the terminals are secure.

In all cases the application and isolation of power must be controlled by the MiniPurge[®] system using the power interlock signal.

No switches are permitted between the power switch and the MiniPurge[®] system other than an authorized manual override circuit.

The safe use of this switch is the responsibility of the user, all electrical installations must conform to local codes of practice.

Exception

Power to apparatus that is already suitable for use in hazardous locations need not be isolated by the MiniPurge[®] system.

Section 7: Commissioning

Commissioning the System

Note: The steps 10 and 14 to 20 represent detailed commissioning tests

The following equipment is needed for this process:

- Continuity meter
- Gauge manometer (0 to 200 mbarg)
- Differential manometer
- 2 off 4mm plugs

If, after commissioning, the system does not perform as expected, refer to the *Fault Finding* Section.

Follow the steps as outlined:

1. Check all connections and that the Relief Valve Unit is fitted correctly with an unobstructed path to the purge exhaust.
2. Set CLAPS regulator and Purge Flow Regulator to 0.
3. Fully open external supply shut-off valve where fitted.
4. Check that the internal logic pressure gauge reads 2.5 barg / 36 psi / 250 kPag.
5. Check that the pressure gauge on main air supply reads 4.2 barg / 61 psi / 420 kPag.
6. Check that the Pressure Relief Valve is correctly set by isolating the High Pressure Sensor and Purge Outlet Valve. To do this locate High Pressure/Open Purge Outlet Signal bulkhead. Follow nylon tube back to the y piece connector. Remove tube and plug.
 - Remove red plug from the top of the Minimum Pressure Sensor and connect a gauge manometer.
 - Raise the internal pressure by turning the CLAPS regulator clockwise till the Low-Pressure Alarm Indicator turns green. This activates the Purge Flow Regulator.
 - Slowly open the Purge Flow Regulator until the Pressure Relief Valve opens. This is the set point.
 - This test can be carried out several times to ensure repeatability and compliance. Refer to the *Maintenance of the System* section if the Relief Valve needs recalibrating.
7. Reset CLAPS regulator and Purge Flow Regulator to 0.
8. De-isolate the High Pressure Sensor and Purge Outlet Valve.
9. Connect a differential manometer to the test points on the flow sensor.

10. To check sensor calibration

- *Raise the internal pressure by turning the CLAPS regulator clockwise until the Low-Pressure Alarm Indicator turns green. This will activate the Purge Flow regulator & Purge Outlet Valve. The pressure will fluctuate as the Purge Outlet Valve opens/closes. This is normal.*
 - *Gradually open the Purge Flow Regulator until System Purging Indicator **flashes yellow**.*
 - *Gradually close Purge Flow Regulator Valve until the purging indicator stops **flashing yellow**.*
 - *Take a reading from pressure gauge.*
11. To set the purge flow rate:
 - Raise the internal pressure by turning the CLAPS regulator clockwise until the Low-Pressure Alarm Indicator turns green. This will activate the Purge Flow regulator and Purge Outlet Valve. The pressure will fluctuate as the Purge Outlet Valve opens/closes. This is normal.
 - Gradually open the Purge Flow Regulator until System Purging Indicator flashes yellow.
 - The flashing yellow indicator confirms the timer has started.
 - The differential pressure should be greater than 6.4 mbarg.

- The relief valve is supplied with different orifice plates for the specified flow rate. This orifice plate is held in position by two M3 screws and can easily be changed by removing the large cover plate from over the outlet valve assembly and screws.

Warning: When opening the Purge Flow Regulator, ensure the over pressure within the enclosure does not exceed the pressure relief valve setting.

12. The purge timer will start as soon as the Purging Indicator **flashes yellow**. Check that the time delay between the indicator turning to **yellow (flashing)** and returning to **black** is not less than the minimum time required for complete purging of the pressurized enclosure. Times in excess of minimum are permitted.
13. After the purge has been completed, the Purge Outlet Valve will close and the air flow into the pressurized enclosure will be controlled by the CLAPS Regulator. The initial setting may be too high or too low.
14. *Gradually turn the CLAPS Regulator anti-clockwise to reduce enclosure pressure.*
15. *Reduce regulator until intermediate sensor causes contacts to open.*
16. *Check reading on manometer matches calibration label on pressure sensor.*
17. *Continue to reduce the CLAPS Regulator to test the minimum pressure sensor.*
18. *To check operation of Minimum Pressure Sensor, check readings on manometer as system will automatically re-purge when it reaches minimum pressure.*
19. *While the system re-purges, return the CLAPS Regulator to the initial setting.*
20. *If the minimum pressure is below the set point, refer to the Recalibration section*
21. If the setting is too high, continual rising and falling of the enclosure pressure will be seen as the CLAPS Regulator automatically shuts off and reinstates the flow. The CLAPS Regulator should be adjusted to reduce the flow into the pressurized enclosure by turning the adjuster screw anti-clockwise.
22. If the initial setting is too low the CLAPS Regulator may not provide enough air flow causing a gradual decline in enclosure pressure. To increase the flow into the pressurized enclosure, adjust the CLAPS Regulator by turning the adjuster screw clockwise.
23. To test the CLAPS settings, create a leak in the system by removing a bolt or loosening a gland plate in order to create a 15mm hole. Remember to replace bolt or retighten gland plate after testing.
24. The setting of the CLAPS Sensor is factory calibrated to the normal working pressure expected in the pressurized enclosure, typically 10 mbarg. The pressure in the pressurized enclosure should be stabilized as close as possible to this figure. This can be checked by a manometer attached to the minimum pressure sensor.
25. Remove the air supply to the system, remove all test equipment and replace all plugs.

Normal Operation

For normal operation of the system, after commissioning has been carried out it is possible to turn the air supply valve on or off to start or stop the system. After this, the purge and pressurization sequence is automatic.

Section 8: Maintenance of the System

General maintenance

The maintenance of the system outlined in this manual should be supplemented with any additional requirements set out in appropriate local codes of practice.

The following checks should be carried out every 6 – 36 months dependent on environment according to IEC / EN 60079-17

- Tests outlined in the *Detailed Commissioning* section.
- Ensure that the Relief Valve Unit is free from contamination prior to making any adjustment. To do this:
 - Remove large cover plate using a 8 mm spanner (wrench).
 - Check that the interior and all components are clean and free from contamination.
 - Replace large cover plate.
- Check the condition of the air supply filter element. Clean or replace as necessary.

Additional maintenance checks

The following additional checks are recommended at least every 3 years:

Check that:

- Apparatus is suitable for use in the hazardous location.
- There are no unauthorised modifications.
- The air supply is uncontaminated.
- The interlocks and alarms function correctly.
- Approval labels are legible and undamaged.
- Adequate spares are carried.
- The action on pressure failure is correct.

Maintenance of Electronic Timer

This should be carried out every 3 years.

- The intrinsically safe battery pack associated with the electronic timer should be replaced and the commissioning tests repeated.
- After the timing phase has elapsed, the battery may be hot-swapped in the hazardous location without affecting the operation of the MiniPurge[®] system

Re-calibration of the Relief Valve Unit

Warning

Incorrect adjustment of the Relief Valve Unit can lead to significant over pressure and result in damage to the enclosure.

If maximum pressure setting is reached, stop adjustment and reduce the pressure.


To perform the following adjustments, an 8 mm spanner (wrench) and a 2.5 mm hex key will be required.

Ensure that the Relief Valve Unit is free from contamination prior to making any adjustment. To do this:

- Remove large cover plate using a 8 mm spanner (wrench).
- Check that the interior and all components are clean and free from contamination.
- Replace large cover plate

To adjust the lift off pressure of the Relief Valve:

- Attach test equipment as described in the *Commissioning* Section.
- Remove small cover plate.
- Whilst holding the central adjustment screw in position using the hex key, loosen the retaining nut.
- Adjust the hex key clockwise to increase, or anti-clockwise to reduce the lift off pressure.
- Before testing, retighten the locking nut whilst holding the adjustment screw in place.
- Carry out the commissioning tests to check the correct setting of the relief valve after adjustment.
- The adjustment is sensitive and it is recommended that a $\frac{1}{4}$ turn (maximum) adjustments are applied between tests.

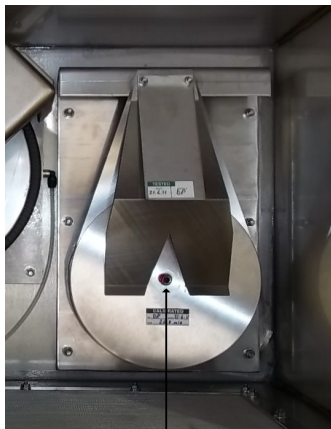

Hex Screw & Lock Nut

Re-calibration of the Pressure Sensors

The brass nozzle on the sensor is sealed into position using Loctite thread sealant. If the thread has seized up, remove to a safe area and heat slightly to soften prior to making any adjustment. This prevents potential damage to the brass of the nozzle.

- Disconnect pipe work from the sensor, including pipe located below the sensor.
- Remove sensor by unscrewing anti-clockwise.
- The nozzle is located under the sensor.
- The adjustment is sensitive, turn the nozzle in $\frac{1}{8}$ of a turn steps.
- Turn clockwise to reduce the pressure setting and anti-clockwise to increase.
- Replace sensor, screwing clockwise.
- Reconnect all pipe work.

Section 9: Fault Finding

General Information

If you are having problems that cannot be corrected using one of the methods described, please call Expo or your supplier for further assistance. If the system is less than 12 months old, parts under warranty should be returned to Expo for investigation. A full report of the fault and the system serial number should accompany the parts.

It is common for problems with the MiniPurge[®] system to be caused by contamination of the air supply with oil, water or dirt. To prevent these problems, the air supply must contain a dust filter and a water filter. This will ensure that the air is instrument quality and protect both the purge system and the equipment being purged. This filtration system is not provided by Expo and must be sourced separately.

Contamination can enter the system from a number of sources. To prevent this, it is essential that the procedures described in the *Installation* section are carried out prior to first use of the system. These procedures should also be carried out following any disconnection and re-connection of the pipe work. Failure to perform these procedures may cause damage to the system that will not be covered by the warranty.

The system has been designed for ease of fault finding and many of the components fitted are plug-in or chassis mounted. Check components by substitution only after establishing that such action is necessary.

Before carrying out the fault finding procedures, ensure that:

- Both the main air pressure to the system and for Motor Purge Systems, the regulated pressure to the logic manifold are as specified on the settings sheet.
- Air pressure does not drop below the minimum supply pressure during purging; the majority of faults reported are due to insufficient air supply during the purge cycle.

System purges correctly but trips and auto re-purges at the end of the purge time.

This is a result of the pressure within the pressurized enclosure being below the minimum pressure sensor setting. The pressure can be checked using a manometer. The most common causes of this problem are outlined below.

Fault Location	Cause	Solution
Pressurized Enclosure	There is debris on the face of the Relief Valve disk held in place by the magnet.	<ul style="list-style-type: none"> • Remove debris and ensure RLV disk is clean.
	Enclosure leaking excessively.	<ul style="list-style-type: none"> • Ensure all doors and covers are closed and that all conduit and cable glands are properly sealed. • Seal any other leaks.
	Pressure sensing tube damaged.	<ul style="list-style-type: none"> • Replace tubing.
CLAPS Regulator	The CLAPS Regulator setting is too low.	<ul style="list-style-type: none"> • Increase the setting of the CLAPS regulator to raise the pressure in the pressurized enclosure after purging. • To do this, turn clockwise.
MiniPurge [®] Control Unit	the Minimum Pressure Sensor setting has drifted above the CLAPS setting	<p>The Minimum Pressure Sensor needs re-calibrating.</p> <ul style="list-style-type: none"> • Refer to <i>Re-calibration of Pressure Sensors</i> in the <i>Maintenance</i> section

Relief Valve opens (continuously or intermittently)

Fault Location	Cause	Solution
Pressurized Enclosure	Enclosure pressure is too high due to CLAPS Regulator being open to far.	Adjust the CLAPS Regulator.
Relief Valve Unit	Debris on the Relief Valve disk allowing air to leak from the valve.	Remove Relief Valve cover and clean the valve disk.

System enters purging but purge indication does not occur

Fault Location	Cause	Solution
Air Supply	Insufficient flow rate due to inadequate air supply pressure. Often due to pressure drop in the supply pipe.	<p>Static pressure of 5 barg must be maintained during purge</p> <ul style="list-style-type: none"> • Check air supply pressure at the inlet to the control unit. • Ensure that the supply pipe bore is suitable for the flow rate
Pressurized Enclosure	Excessive leakage from the pressurized enclosure.	<ul style="list-style-type: none"> • Check around the enclosure while purging is taking place. • Total leakage at purge outlet valve should not exceed 10% of purge flow sensor setting. • Check for leakage down cables and conduit.
Pipe Work	Tubing from Relief Valve flow sensing point not air tight.	<ul style="list-style-type: none"> • Ensure fitting nuts are tightened. • Check for tube damage. • Repair as necessary.
Relief Valve Unit	Relief Valve opening during purge	<ul style="list-style-type: none"> • Check enclosure pressure on start up is less than Relief Valve lift off pressure.
MiniPurge Control Unit	Flow sensor setting incorrect	<ul style="list-style-type: none"> • Check the pressure is correct on the flow sensor.

System begins purging but cycles fail to complete

Fault Location	Cause	Solution
Electronic Timer	Time set to 00	<ul style="list-style-type: none"> • Reset timer to correct purge time.
	The intrinsically safe battery pack is discharged	<ul style="list-style-type: none"> • Replace as necessary .

Section 10: Recommended Spares List

Part Number	Description
HF1-A03X-002	Filter spare kit for HF1-A03X-001, 1.5" & 2" BSP port filters
S0030/606	Purge flow sensor factory set
S0030/016	Minimum Pressure sensor, must be factory set to the value as stated on the Customer Test and Inspection Sheet
S0030/588	CLAPS Sensor must be factory set to the value as stated on the Customer Test and Inspection Sheet
S0015/018	Pressure gauge (Air Supply Pressure), 0 - 10 barg
S0015/135	Miniature gauge (Logic Pressure), 0-4 barg
ETM-IS31-001	IS battery pack for electronic timer module
AGE-GE00-168	Electronic Timer Assembly c/w potted Timer Switch

Section 11: Glossary

Acronym	Definition
A&T	Alarm and Trip
AO	Alarm Only
CLAPS	Closed Loop Automatic Pressurization System
CU	Control Unit
ET	Electronic Timer
FCV	Flow Control Valve
IS	Intrinsically Safe
LC	Leakage Compensation
PA	Power and Alarm
RLV	Relief Valve Unit

Section 12: Drawings and Diagrams

Title	Drawing Number	Number of Sheets
D808MOTORSYS	D808-GA	2
Size 7 MotorPurge Relief Valve	XBR-RTD0-007	1
RLV 250 Assembly	ARV-2508-001 GA	1
Motorpurge Hook-Up	MOTOR-HU	1
D808 P and I Diagram	D808-PI	1
D808/D838 Circuit Diagram	AGM-PA00-167	1

Section 13: Certificates

Download the certificates at www.expoworldwide.com/downloads or refer to ML497.


Component	Certificate	Number
Purge System	ATEX Certificate	SIRA 01ATEX1295X
	IECEX Certificate	IECEX SIR07.0027X
	INMETRO/TÜV Certificate	TÜV 12.1462X
MIU/e Ex e Terminal Box	ATEX Certificate	ExVeritas 19 ATEX0542X
	IECEX Certificate	IECEX EXV 19.0057X
	INMETRO/TÜV Certificate	TÜV 12.1463
Electronic Timer	ATEX Certificate	FM 10 ATEX0003X
	IECEX Certificate	IECEX FME 10.0001X
Electronic Switches	Ex d limit switch	IECEX EPS 14.0092X
	Ex d limit switch	EPS 14 ATEX 1766 X



3rd ANGLE PROJECTION

DIMENSIONS IN mm
DO NOT SCALE

UNSPECIFIED NO DEC PLACE ±0.5 TOLERANCES
1 DEC PLACE ±0.2
2 DEC PLACE ±0.1
FLATNESS TO BE LESS THAN 0.4mm OVER ANY 100mm LENGTH

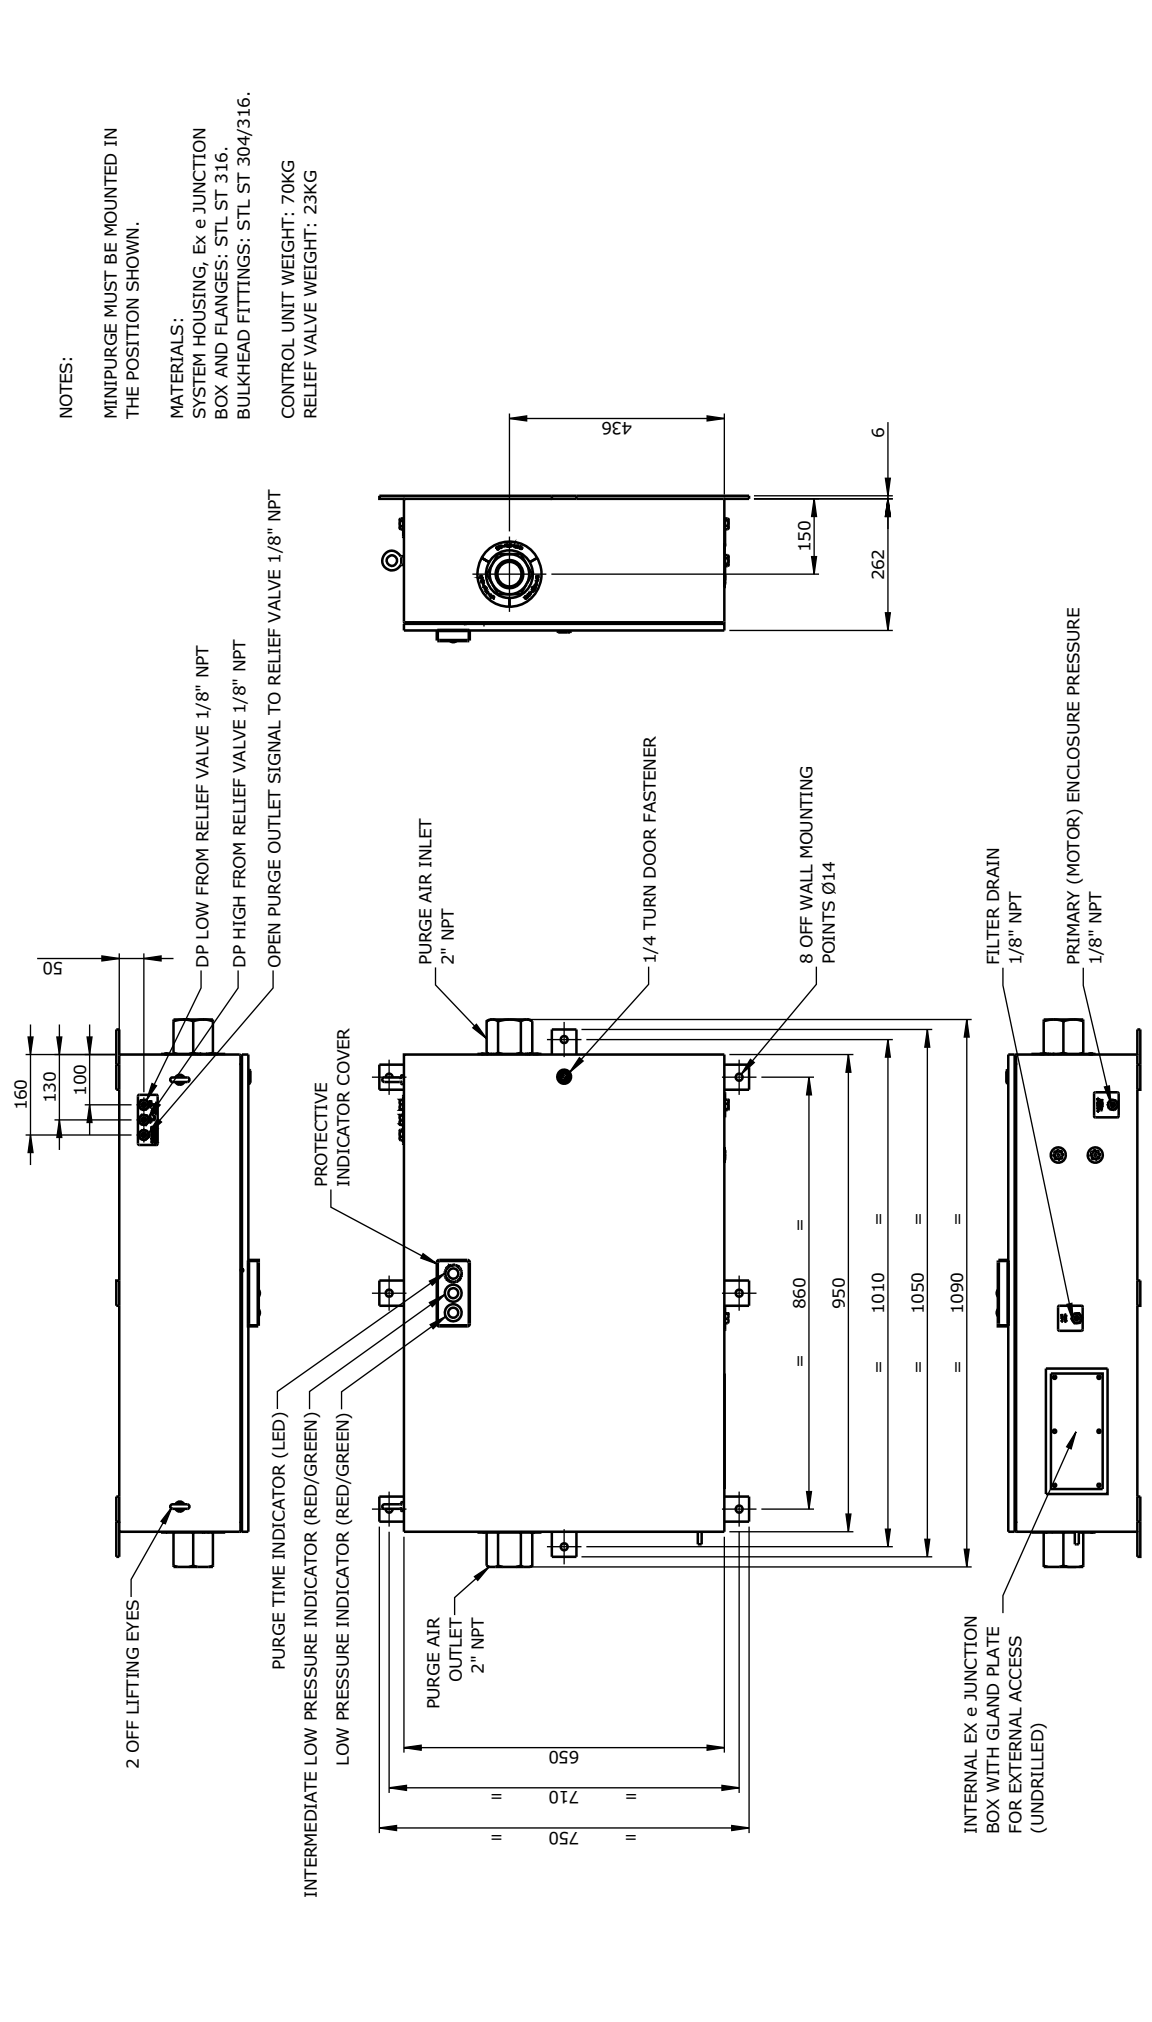


NOTES:

MINIPURGE MUST BE MOUNTED IN THE POSITION SHOWN.

MATERIALS:
SYSTEM HOUSING, EX e JUNCTION BOX AND FLANGES: STL ST 316.
BULKHEAD FITTINGS: STL ST 304/316.

CONTROL UNIT WEIGHT: 70KG
RELIEF VALVE WEIGHT: 23KG

REV. 03	MOD NUMBER 5928	APPROVED DATE 16/09/2013	APPROVED JpDb	DRAWN DATE 03/11/2011	DRAWING STATUS: production	MATERIAL STAINLESS STEEL 316L 1.5mm THK	SURREY TW16 5DB UNITED KINGDOM		SCALE 1:10	REV. 05
04	5929	17/09/2013	JpDb	APP'D SM	CHK'D VN	FINISH NROB ON ALL EXTERNAL SURFACES	D808MOTORSYS		DRAWING No. D808-GA	SHEET No 1 OF 2
05	5970	19/11/2013	JpDb	DM	Nigel		D808MOTORSYS		CUSTOMER:	

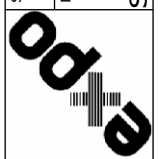


3rd ANGLE PROJECTION


DIMENSIONS IN mm
DO NOT SCALE


UNSPECIFIED NO DEC PLACE ±0.5
TOLERANCES
1 DEC PLACE ±0.2
2 DEC PLACE ±0.1
FLATNESS TO BE LESS THAN 0.4mm OVER ANY 100mm LENGTH

The contents of this drawing / document are Copyright © Expo Technologies Limited. They are to be treated as confidential and are returnable upon request. They are not to be copied or communicated in part or in whole without written consent from Expo Technologies Limited, neither are they to be used in any way against our interests.


REF	DESCRIPTION
1	MAIN AIR SUPPLY FILTER
2	ISOLATING VALVE
3	SYSTEM REGULATOR
4	10 BAR GAUGE
5	MAIN AIR SUPPLY GAUGE
6	VOLUME BOOSTER
7	INTERMEDIATE LOW PRESSURE SWITCH ACTUATOR
8	LOW PRESSURE ALARM & TRIP INDICATOR, RED/GREEN
9	INTERMEDIATE LOW PRESSURE ALARM INDICATOR, RED/GREEN
10	PURGE COMPLETE SWITCH AC-15 250V 4A DPCO
11	LOW PRESSURE SWITCH AC-15 250V 4A SPCO
12	PURGE FLOW SENSOR
13	PURGE COMPLETE VALVE
14	TIMER VALVE
15	INTERMEDIATE LOW PRESSURE SWITCH AC-15 250V 4A SPCO
16	LOW PRESSURE SENSOR
17	PURGE OUTLET OPEN SIGNAL VALVE (1)
18	PURGE CHANGE OVER VALVE 1
19	PURGE CHANGE OVER VALVE 2
20	PURGE ISOLATION VALVE
21	CLAPS SENSOR
22	PURGE OUTLET OPEN SIGNAL VALVE (2)
23	INTERMEDIATE LOW PRESSURE SENSOR
24	HIGH PRESSURE SENSOR
25	PURGE FLOW REGULATOR
26	PURGE FLOW GAUGE
27	LOGIC AIR SUPPLY REGULATOR
28	LOGIC AIR SUPPLY GAUGE
29	CLAPS REGULATOR
30	Ex e TERMINAL BOX
31	PURGE IN PROGRESS INDICATOR, BLACK/YELLOW
32	ELECTRONIC TIMER
33	ELECTRONIC TIMER BATTERY
OPTIONAL	
34	PURGE IN PROGRESS/HIGH PRESSURE/SECONDARY LOW PRESSURE SWITCH AC-15 250V 4A SPCO

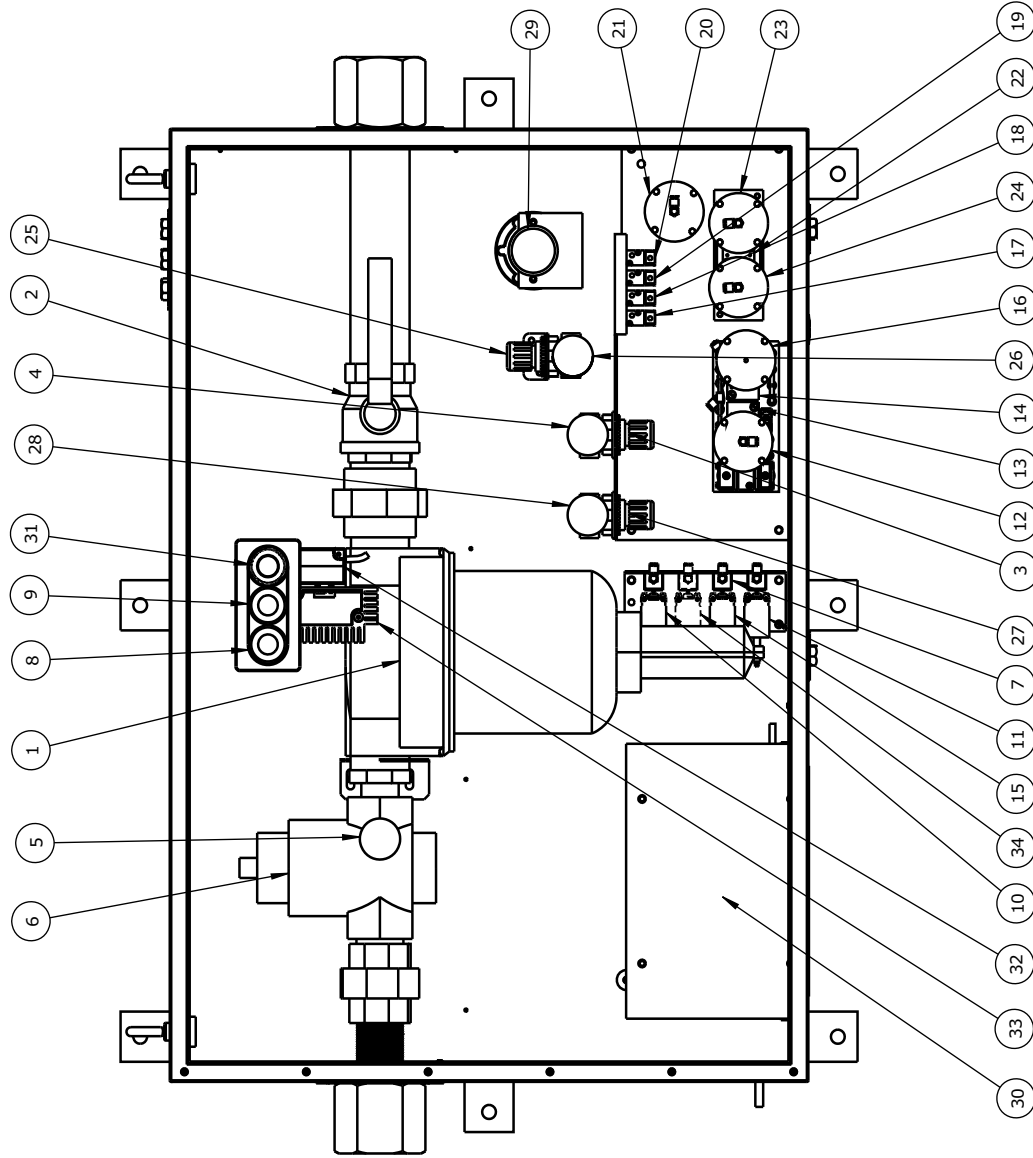

DRAWN DATE: 03/11/2011	MATERIAL STAINLESS STEEL 316L 1.5mm THK			SCALE	NTS	REV: 05
	DRAWING STATUS: production	FINISH NROB ON ALL EXTERNAL SURFACES		TITLE D808MOTORSYS	DRAWING No. D808-GA	SHEET No. 2 OF 2
APP'D JPdB	CHK'D DM	DR'WN DR	JOB No:	CUSTOMER:		

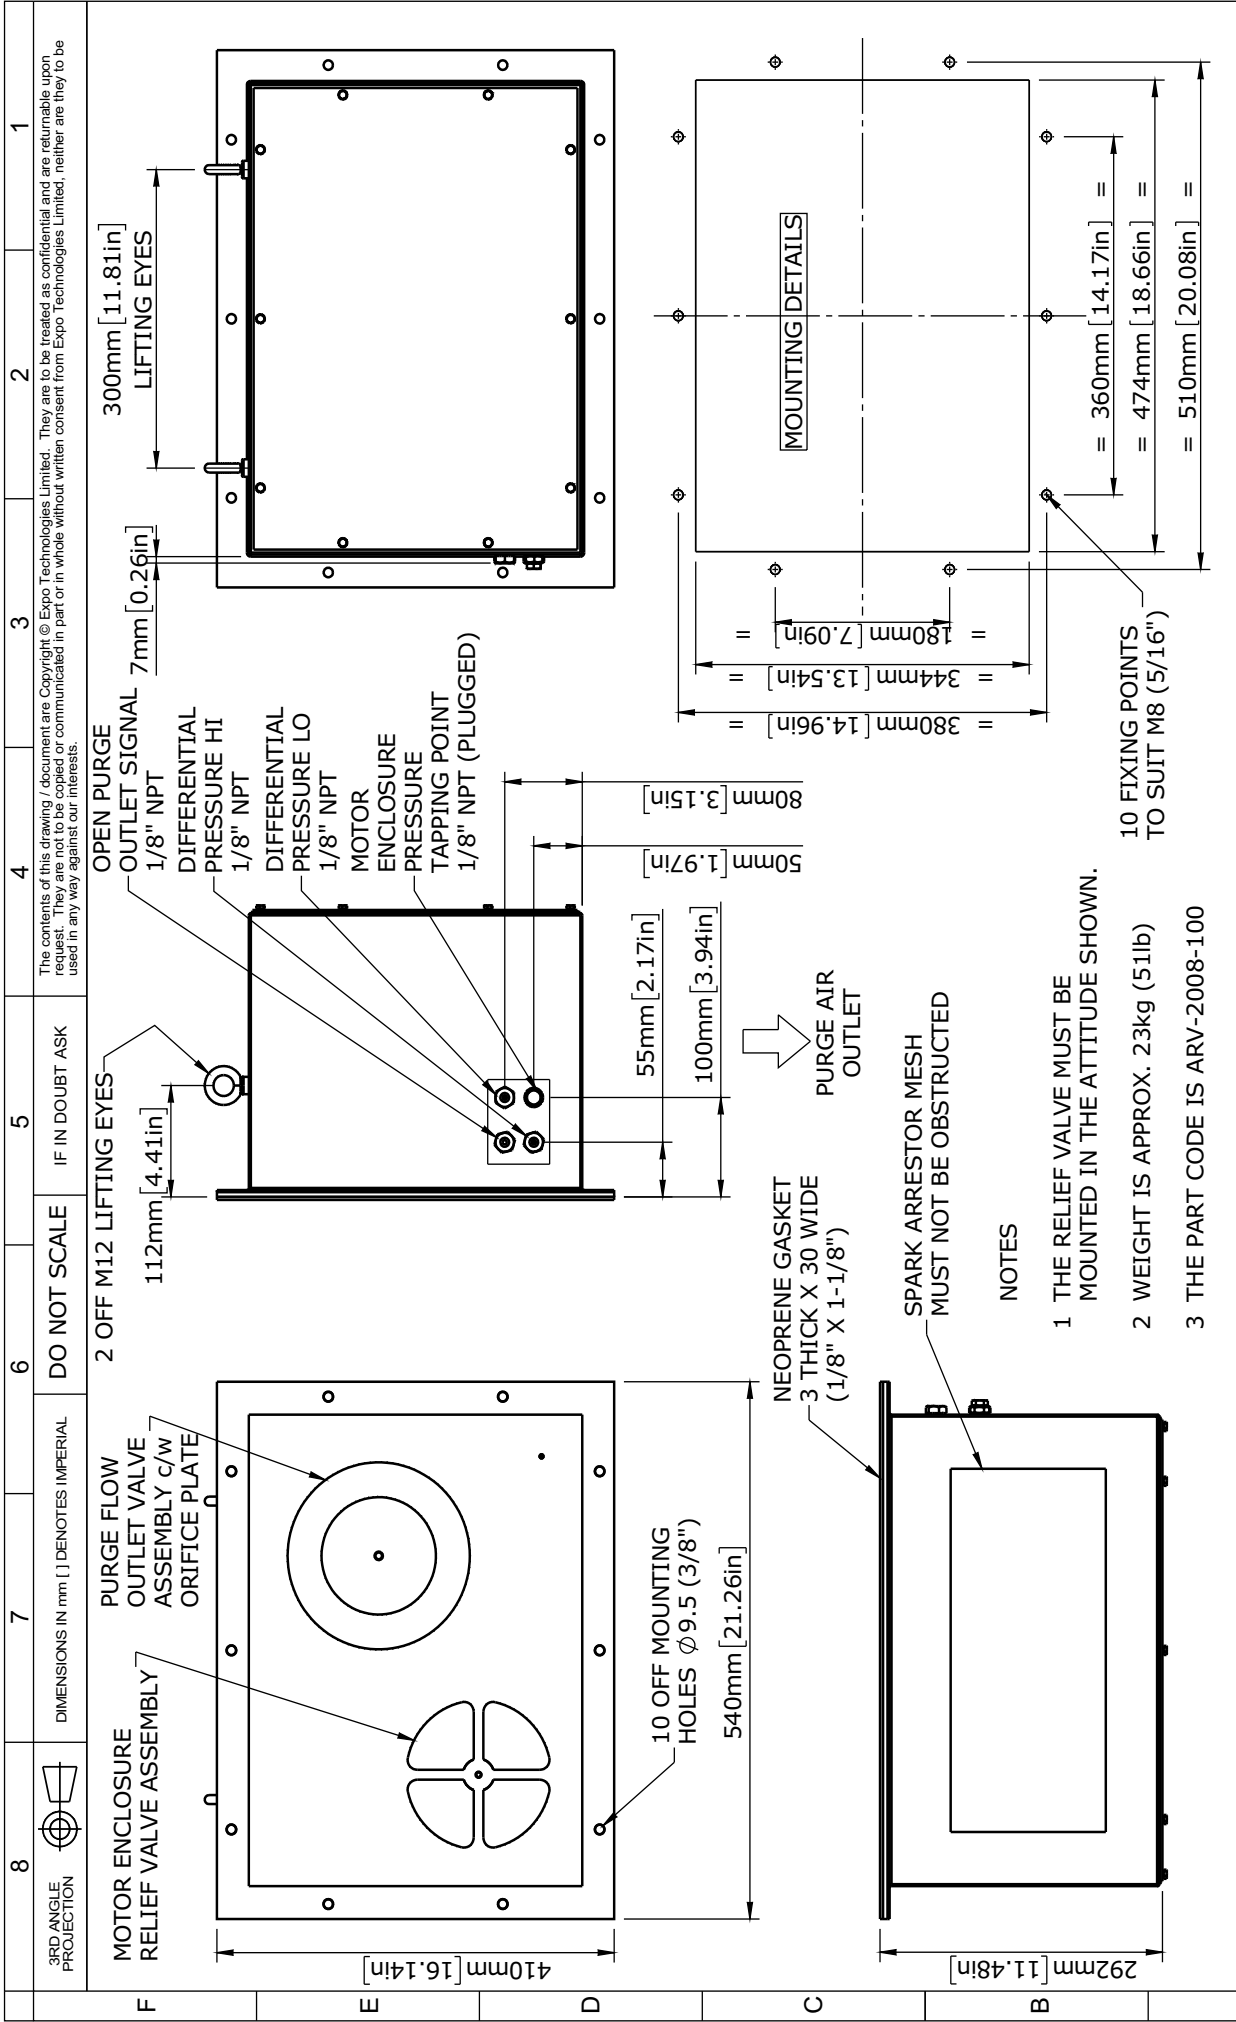

REV. 05		MOD NUMBER 5360	APPROVED DATE 14/10/2011	APPROVED JPdB	DATE 26/09/2007	STATUS PRODUCTION	DRAWN BY JPdB		CHECKED BY PSC		SB						
REV. 06		MOD NUMBER 5877	APPROVED DATE 12/07/2013	APPROVED JPdB	DRAWN BY JPdB		CHECKED BY PSC		SB		SB						
REV. 07		MOD NUMBER 6597	APPROVED DATE 17/08/2017	APPROVED JG	DRAWN BY JG		CHECKED BY PSC		SB		SB						
TOLERANCES UNLESS OTHERWISE STATED					MATERIAL					FIRST USED ON		SCALE					
DECIMALS X ±0.5					FINISH					WEIGHT		DRAWING NO.					
ANGLE STD ±1°					FINISH					WEIGHT		DRAWING NO.					
X.X ±0.2					FINISH					WEIGHT		DRAWING NO.					
X.XX ±0.1					FINISH					WEIGHT		DRAWING NO.					
FLATNESS TO BE LESS THAN 0.4 OVER ANY 100mm LENGTH					FINISH					WEIGHT		DRAWING NO.					
<p>Expo Technologies Limited SURREY, TW16 5DB UNITED KINGDOM</p> <p>SIZE 7 MOTORPURGE RELIEF VALVE</p>												A3		1:5		07	
<p>Expo Technologies Limited SURREY, TW16 5DB UNITED KINGDOM</p> <p>SIZE 7 MOTORPURGE RELIEF VALVE</p>												A3		1:5		07	
<p>Expo Technologies Limited SURREY, TW16 5DB UNITED KINGDOM</p> <p>SIZE 7 MOTORPURGE RELIEF VALVE</p>												A3		1:5		07	

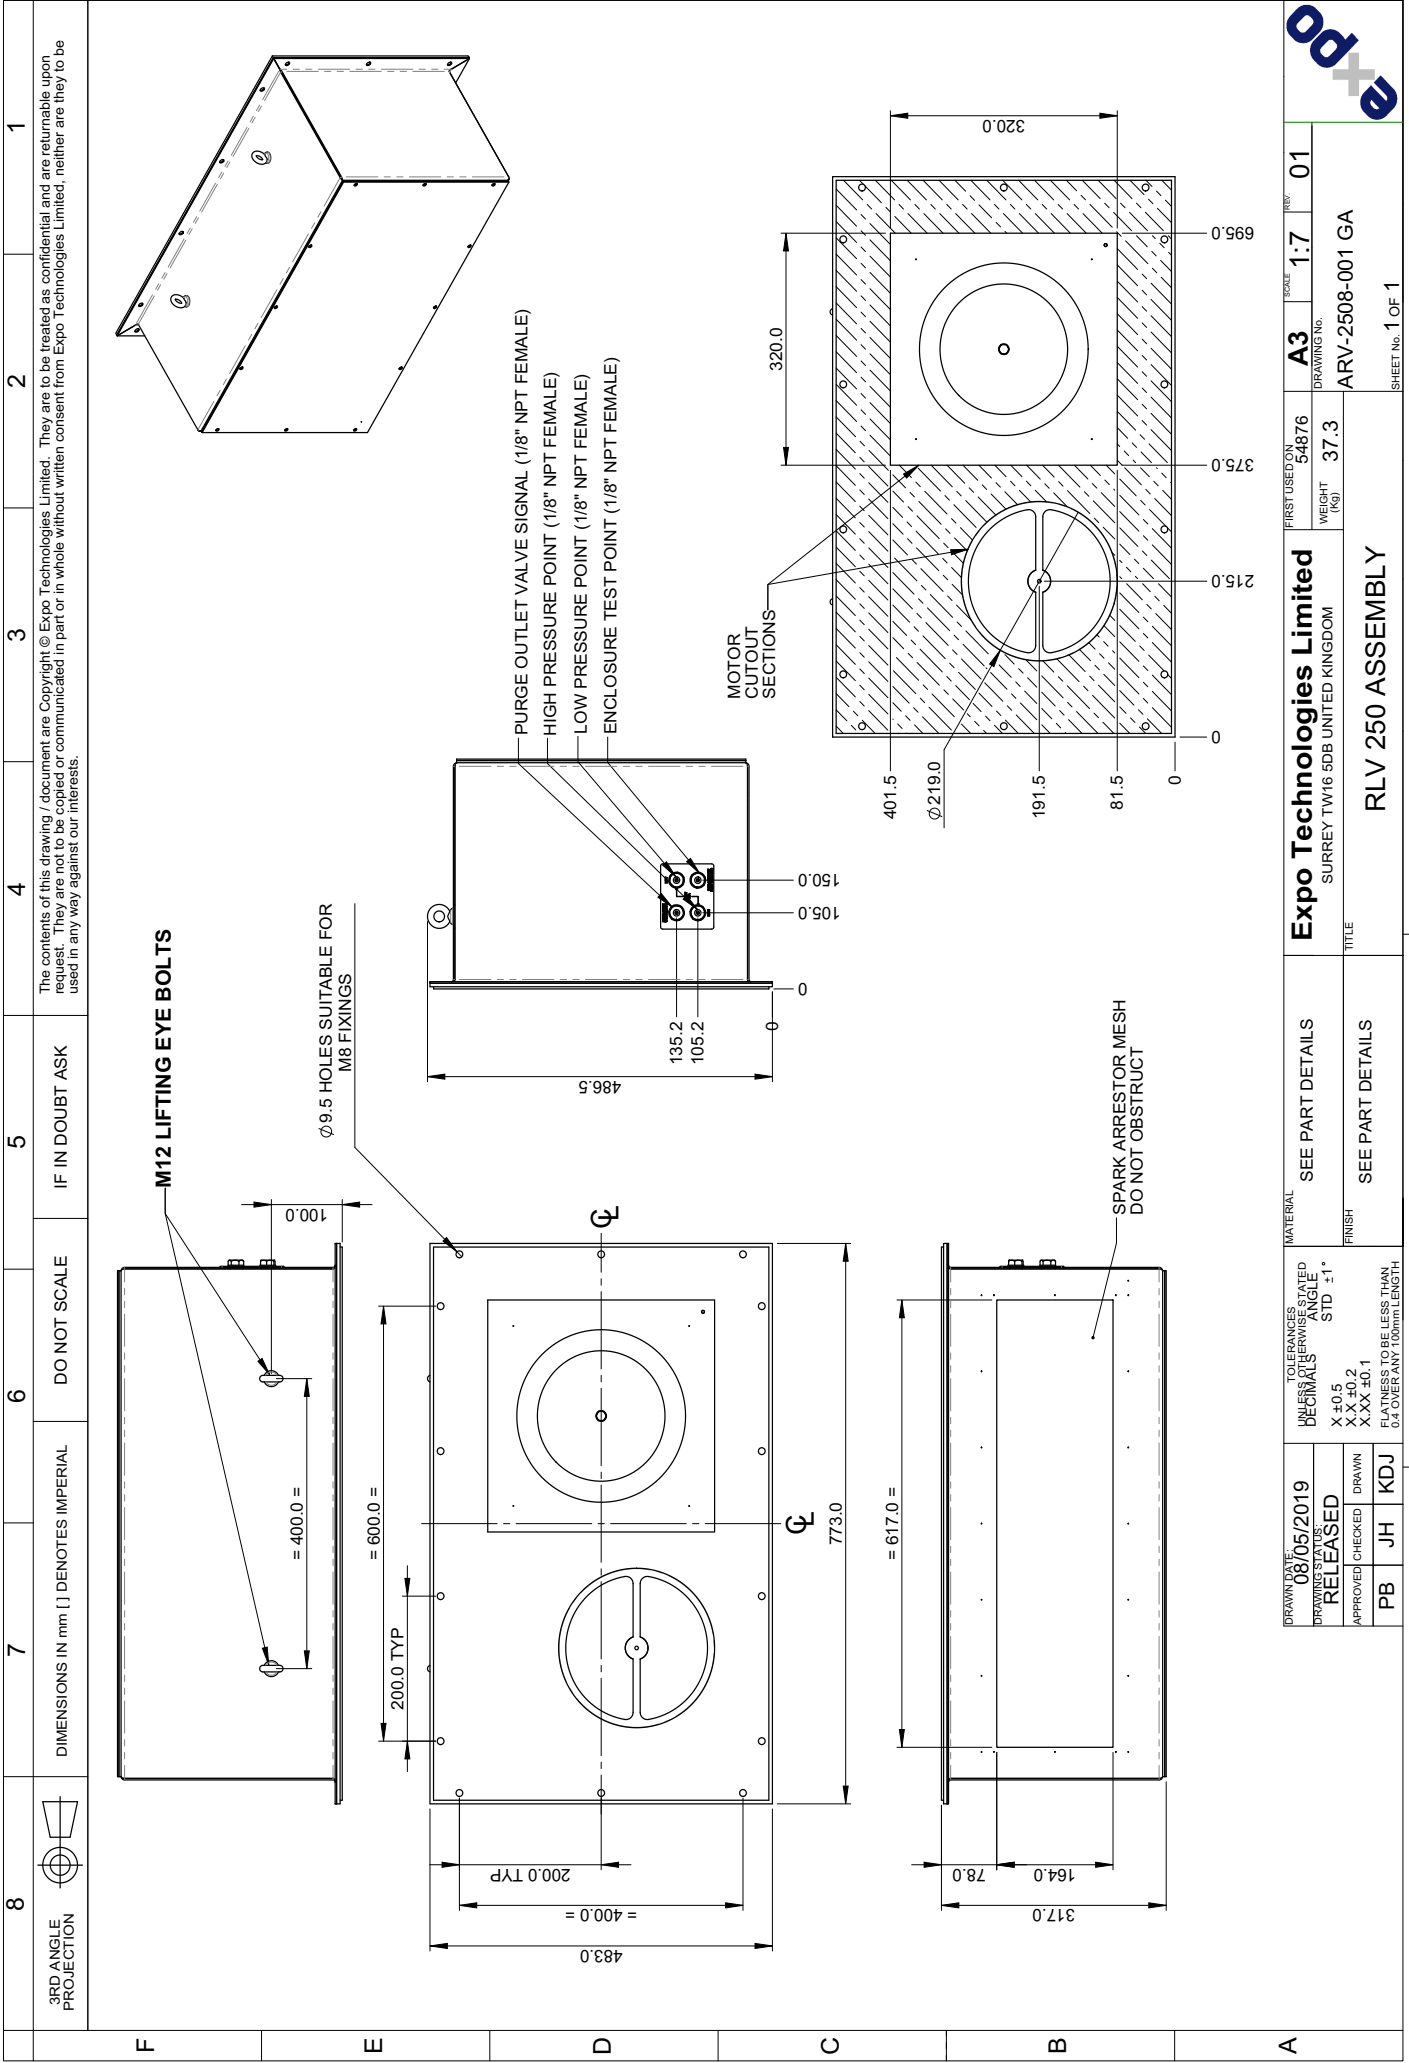

The contents of this drawing / document are Copyright © Expo Technologies Limited. They are to be treated as confidential and are returnable upon request. They are not to be copied or communicated in part or in whole without written consent from Expo Technologies Limited, neither are they to be used in any way against our interests.

TOLERANCES UNLESS OTHERWISE STATED DIMENSIONS DECIMALS STD ±1° ANGLES STD ±1° X ±0.5 X.X ±0.2 X.XX ±0.1 FLATNESS TO BE LESS THAN 0.4 OVER ANY 100mm LENGTH	MATERIAL FINISH	SEE PART DETAILS SEE PART DETAILS	Expo Technologies Limited SURREY TW16 5DB UNITED KINGDOM	FIRST USED ON: 54876 DRAWING No. ARV-2508-001 GA WEIGHT (kg): 37.3	SCALE: A3 REV: 1.7 SHEET No. 1 OF 1
--	--------------------	--------------------------------------	--	--	---


3rd ANGLE
PROJECTION




DIMENSIONS IN mm
DO NOT SCALE

UNSPECIFIED NO DEC PLACE ± 0.5
TOLERANCES 1 DEC PLACE ± 0.2
2 DEC PLACE ± 0.1
FLATNESS TO BE LESS THAN 0.4mm OVER ANY 100mm LENGTH

The contents of this drawing / document are Copyright © Expo Technologies Limited. They are to be treated as confidential and are returnable upon request. They are not to be copied or communicated in part or in whole without written consent from Expo Technologies Limited, neither are they to be used in any way against our interests.

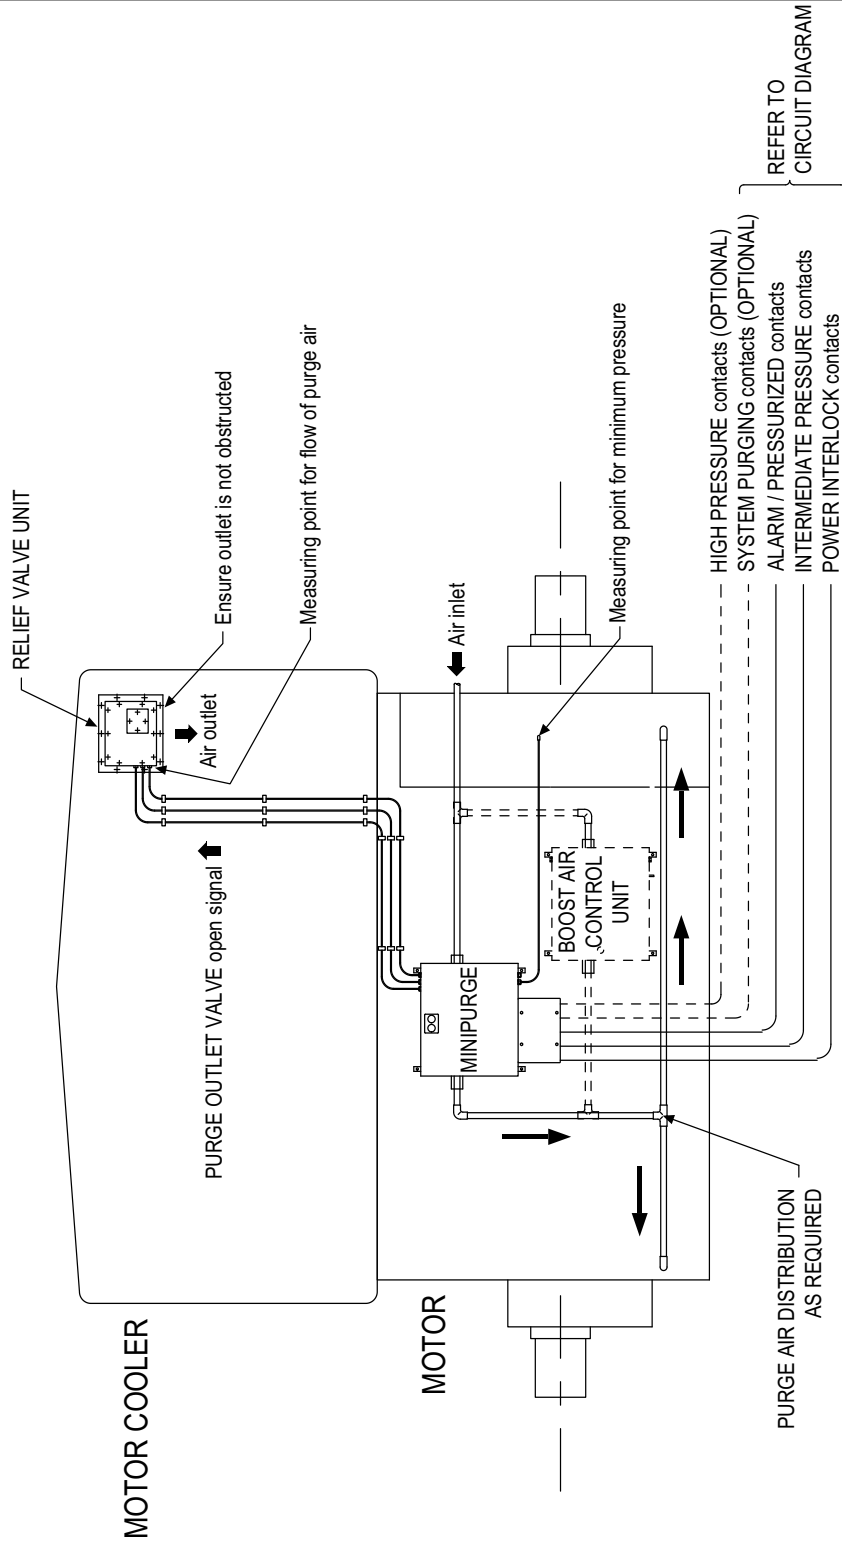

APP'D	MLC	ISSUE:	1	MATERIAL	Expo Technologies Limited		SCALE	NTS
CHK'D	MLC	MOD. No:	DRAWN	FINISH	SURREY TW16 5DB UNITED KINGDOM		DRAWING No.	MOTOR-HU
DRWN	LG	DATE:	03/07/2019		TITLE			SHEET No. 1 OF 1
		APPROVED:	MLC		JOB No:			
		DRAWING STATUS:	RELEASED		CUSTOMER:			
					MOTORPURGE HOOK-UP			

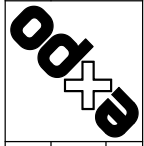


3rd ANGLE
PROJECTION



DIMENSIONS IN mm
DO NOT SCALE

UNSPECIFIED NO DEC PLACE ±0.5
TOLERANCES 1 DEC PLACE ±0.2
2 DEC PLACE ±0.1
FLATNESS TO BE LESS THAN 0.4mm OVER ANY 100mm LENGTH

The contents of this drawing / document are Copyright © Expo Technologies Limited. They are to be treated as confidential and are returnable upon request. They are not to be copied or communicated in part or in whole without written consent from Expo Technologies Limited, neither are they to be used in any way against our interests.

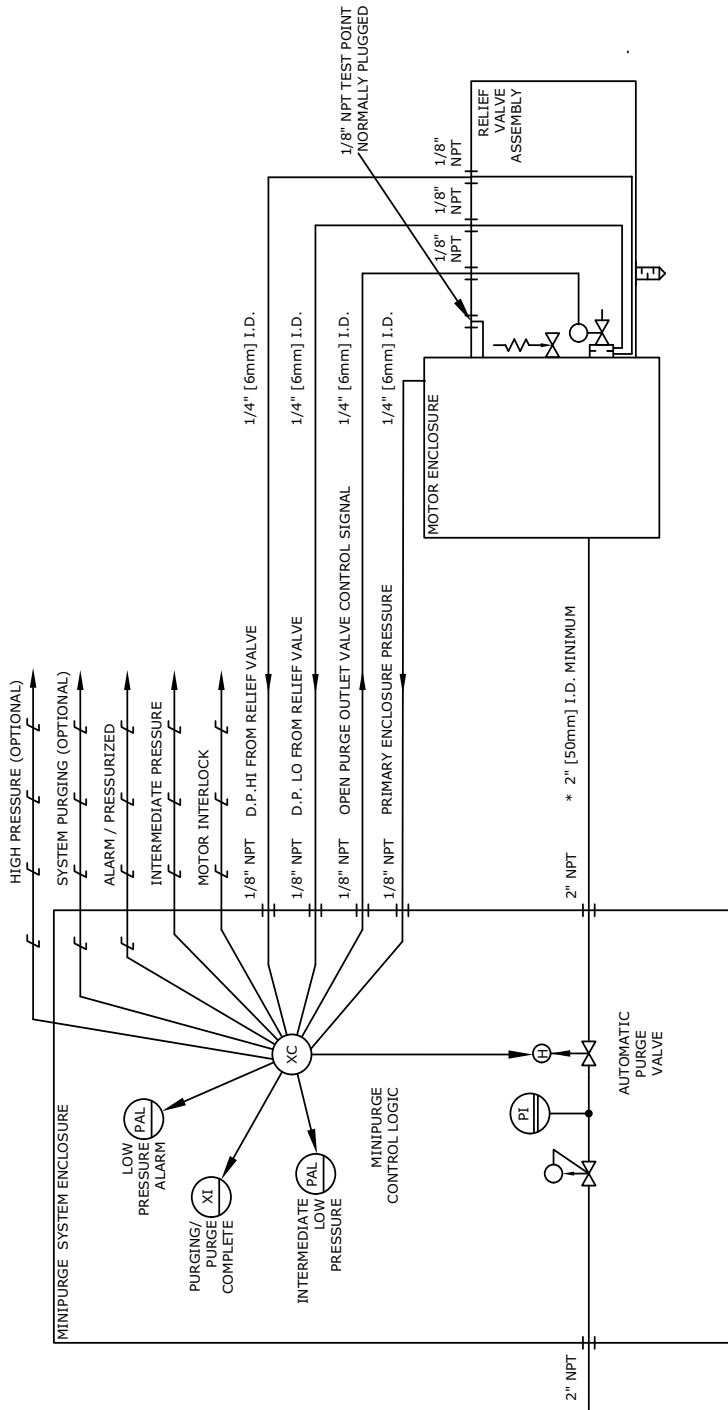

SUPPLY
4.2 - 8 barg (61 - 116 psi)
INSTRUMENT
AIR/INERT GAS 2" [50mm] I.D. MINIMUM

* RECOMMENDED MINIMUM SIZE FOR PURGE AIR DISTRIBUTION PIPEWORK

— — — — — ELECTRICAL SIGNAL VIA JUNCTION BOX
- - - - - OPTIONAL

APPD	PB	ISSUE:	1	2	MATERIAL	Expo Technologies Limited SURREY TW16 5DB UNITED KINGDOM		SCALE	NTS
CHKD	AR	MOD. No:	DRAWN	DGN-12429	FINISH	TITLE D808 P AND I DIAGRAM		DRAWING No.	D808-PI
DRWN	LG	DATE:	APPROVED:	PB MH		JOB No: CUSTOMER:		SHEET No.	1 OF 1
		DRAWING STATUS:	RELEASED						


3rd ANGLE
PROJECTION

DIMENSIONS IN mm
DO NOT SCALE

UNSPECIFIED NO DEC PLACE ±0.5
TOLERANCES 1 DEC PLACE ±0.2
2 DEC PLACE ±0.1
FLATNESS TO BE LESS THAN 0.4mm OVER ANY 100mm LENGTH

The contents of this drawing / document are Copyright © Expo Technologies Limited. They are to be treated as confidential and are returnable upon request. They are not to be copied or communicated in part or in whole without written consent from Expo Technologies Limited, neither are they to be used in any way against our interests.

MINIPURGE SYSTEM ENCLOSURE

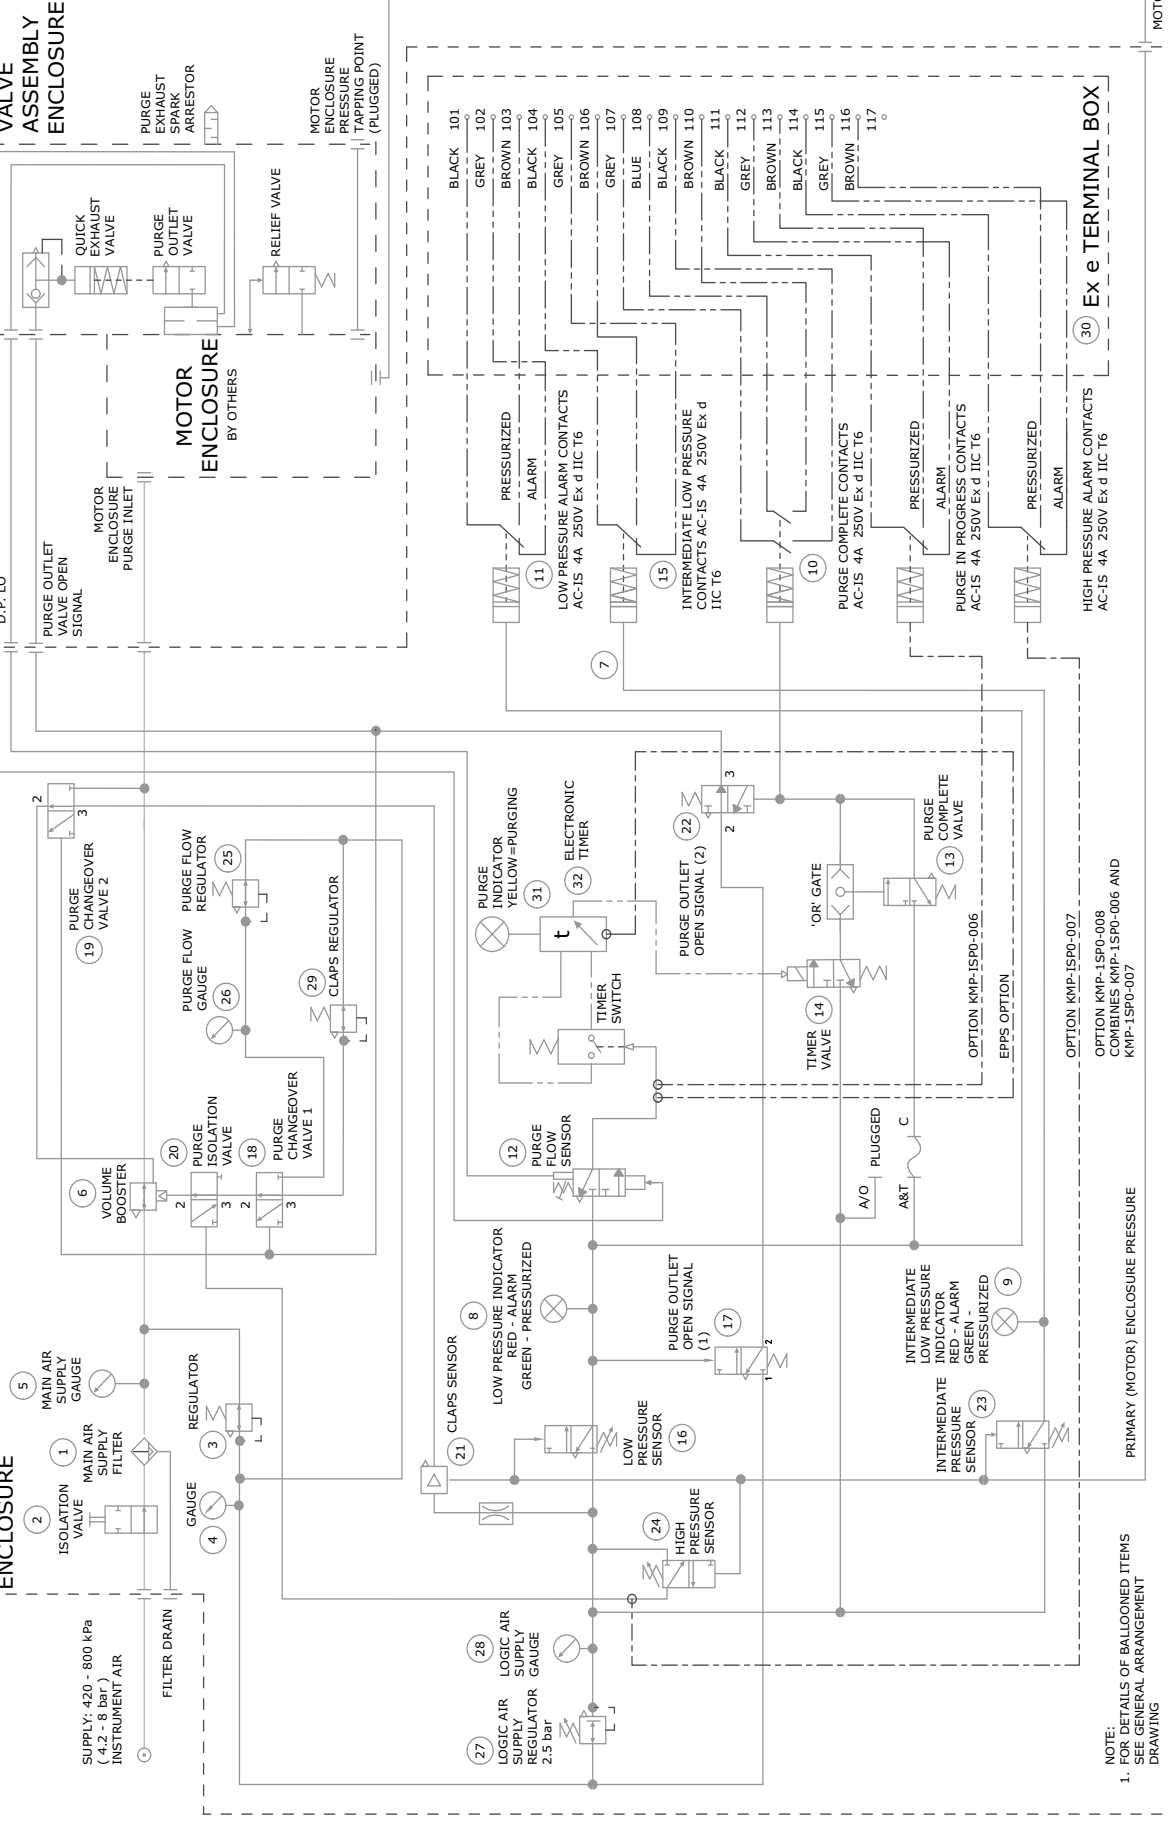

NOTE:
1. FOR DETAILS OF BALLOONED ITEMS
SEE GENERAL ARRANGEMENT
DRAWING

APPD	AR	ISSUE:	1	2	MATERIAL	Expo Technologies Limited			SURREY TW16 5DB	SCALE	NTS
CHKD	CE	MOD. No:	DRAWN	12427		Expo Technologies Limited			UNITED KINGDOM	DRAWING No.	AGM-PA00-167
DRWN	RD	DATE:	26/09/19	19/11/19	FINISH	D808/D838			CIRCUIT DIAGRAM	SHEET No.	1 OF 1
		APPROVED:	AR	PB		JOB No:			54876	CUSTOMER:	
		DRAWING STATUS:	RELEASED			MOTOR ENCLOSURE PRESSURE BULKHEAD					



CE EU-Declaration of Conformity

With
European
Directives

Issued under the sole responsibility of
Expo Technologies Ltd
Unit 2, The Summit, Hanworth Road
Sunbury on Thames TW16 5DB, UK

This is to declare that the MiniPurge Purge Controller is manufactured in conformity with the following European Directives and standards:

Electromagnetic Compatibility Directive 2014/30/EU

MiniPurge Systems with a /PO suffix in the type number are non-electrical and are outside the scope of the EMC Directive.

MiniPurge Systems with suffices /PA or /IS incorporate one or more volt-free (“dry”) contacts which work in circuits specified by others. In normal operation these circuits are “benign” and no CE mark is appropriate.

MiniPurge Systems with Electronic Timer (Option /ET and /ES) are designed to conform to the EMC Directive, in compliance with EN 61000-6-4:2007 and EN 61000-6-2:2005 (Intertek Report EM10048000) and 61000-6-4:2007 + A1:2011 and EN 61000-6-2:2005 (Intertek Report 102569070LHD-001) respectively.

Low Voltage Directive 2014/35/EU

MiniPurge Systems are intended for use in potentially explosive atmospheres (Hazardous Areas) and are therefore excluded from the Low Voltage Directive.

Pressure Equipment Directive 2014/68/EU

MiniPurge Systems are classified as not higher than category I under Article 13 of this Directive and intended for use in potentially explosive atmospheres (Hazardous Areas) and are therefore excluded from the Pressure Equipment Directive. MiniPurge Systems are covered under ATEX Directive 2014/34/EU.

ATEX Directive 2014/34/EU Equipment for explosive atmospheres

MiniPurge Systems are designed to conform to the ATEX Directive in fulfilment of the essential health and safety requirements set out in Annex II, and in compliance with:

EN 60079-0: 2012 + A11:2013 EN 60079-2: 2014

MiniPurge Systems are certified by CSA Group Netherlands B.V., Utrechtseweg 310, 6812 AR, Arnhem, Netherlands, under EC Type-Examination Certificate SIRA 01ATEX1295X, in compliance with:

EN 60079-0: 2012 + A11:2013 EN 60079-2: 2014

According to the model, MiniPurge Systems are rated and shall be marked as follows:

MiniPurge, Type X & Type Y models	Group II Category 2G & 2D	
Or MiniPurge, Type X	Group II Category 2G	
MiniPurge, Type Z models	Group II Category 3G & 3D	

MiniPurge systems are manufactured under Production Quality Assurance Notification SIRA 99 ATEX M043, issued by CSA Group Netherlands B.V. (CSA), Notified Body No 2813.

Signed for and on behalf of Expo Technologies Ltd.,

John Paul de Beer
Managing Director

Date 12/11/2019
Confidential Assessment file reference SC004

[This Page Intentionally Left Blank]

[This Page Intentionally Left Blank]

[This Page Intentionally Left Blank]

[This Page Intentionally Left Blank]

Expo Technologies USA

Expo Technologies Inc.
9140 Ravenna Road Unit #3
Twinsburg,
OH 440878, USA
T: +1 440 247 5314
F: +1 330 487 0611
E: sales.na@expoworldwide.com

Expo Technologies UK

Expo Technologies Ltd.
Unit 2 The Summit, Hanworth Road
Sunbury-On-Thames,
TW16 5DB, UK
T: +44 20 8398 8011
F: +44 20 8398 8014
E: sales@expoworldwide.com

Expo Technologies China

Qingdao Expo M&E Technologies Co. Ltd
329 Huashan Er Lu
Jimo City, Qingdao,
266200 China
T: +86 532 8906 9858
F: +86 532 8906 9858
E: qingdao@expoworldwide.com

www.expoworldwide.com